


OPERATING YOUR EMV

POWERING UP AND OPERATION

Ensure the low and high voltage disconnects are turned to the "ON" position.

During normal day to day operation, the low and high voltage disconnects should not be turned off.

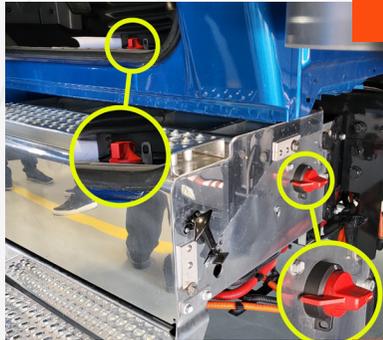

1

Ensure the Low and High Voltage disconnect switches are in the "ON" position.




2

Turn key "ON"....

Wait 10 seconds for gauges to sweep.

Depress brake pedal.

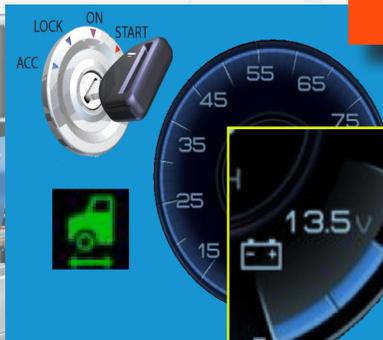

3

Turn key to "START".

Cluster will display "GREEN" "OK to Drive" symbol.

(12-volt system must be at least 11 volts)



4

Release parking brake.



5

Select desired gear.

